Garmin Forerunner 35 30□□□□□□Wholesale□□□□□□□□□□□□□□□□□□□□

□□□□□□ □
●□□□□□□□□Garmin Forerunner 35 30 Ort
●□□□CBGM62
●□□□□□□□□□□□□
●□□□□□□□□□□□□□□□□□□□

1# 黑色
Black

2# 粉色
Pink

3# 水鸭绿
Teal Green

4# 紫色
Purple

5# 橙色
Orange

EASY

INSTALL ON / OFF

Quick and simple to install
and remove the band.

7527
/10452
3.8
GARMIN

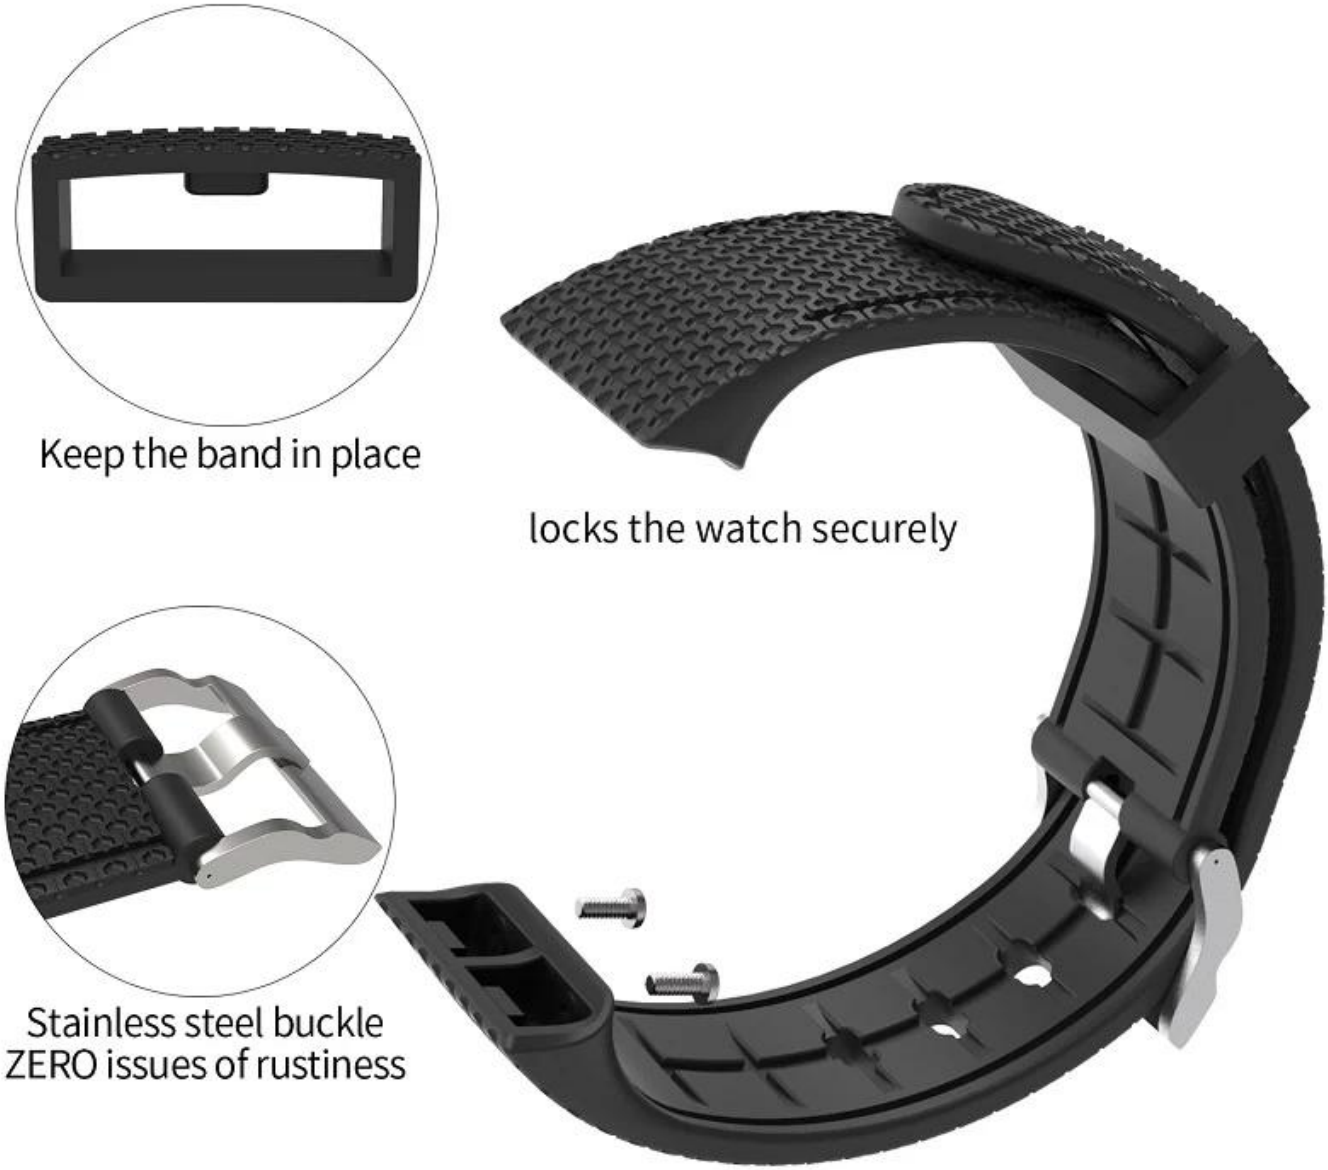
Keep the band in place
locks the watch securely
Stainless steel buckle
ZERO issues of rustiness

Accessories

install with Screws and screw driver

total 20PCS screws

12:23
16 Oct
GARMIN