


Apple Watch Ultra Series 8 7 6 5 4 3

- 
- CBIW1011
- 
- 
- 140-200mm
- 
- 

OPP



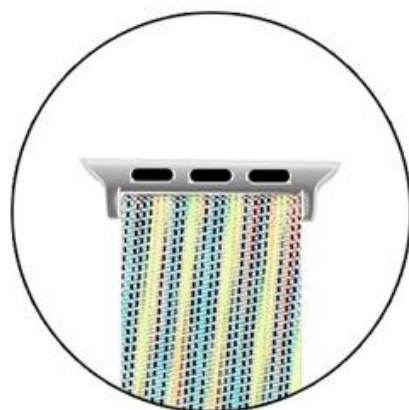

T-shaped Streamline Design



Stainless Steel Buckle






# Tape size diagram

Fits most wrists 5.5-7.9inch/140-200 mm




**FITS UP TO**

5.5-7.9inch(14-20cm)wrist

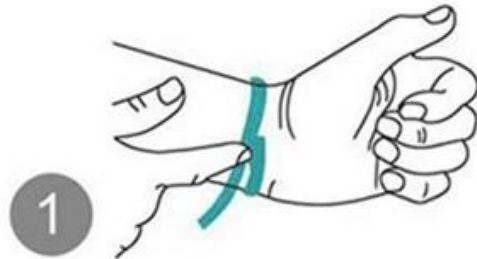

Wrap the rope to your wrist tight and then make a mark on it.

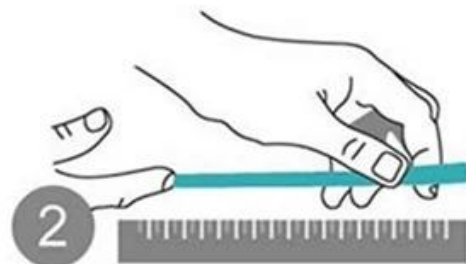

Measure the rope length from zero scale to the marked position with a ruler.

\* Pure manual measurement, if there is any error, please forgive me.

# How to Install

The following figure



1

Press the raised button.



2

Slide the tape onto the track of the watch and slide in the direction of the arrow (Note: Slide without loosening the button)



3

When you hear the click, it means that the strap has been buckled with the dial, so you can use it safely.