















Assembly Instructions

1. Prepare the link remover and watch band.



2. Align the pin of the link remover with 1 of the link holes and insert it in to link holes.




3. Twist clockwise the link remover to press the link bar out with the direction of arrow. And then pull out the link bar out of it with your hands.



4. Disassemble another link with the same step.



5. Assemble links. Put 1 of the rod end to the hole inside another link, then align the 2 links.

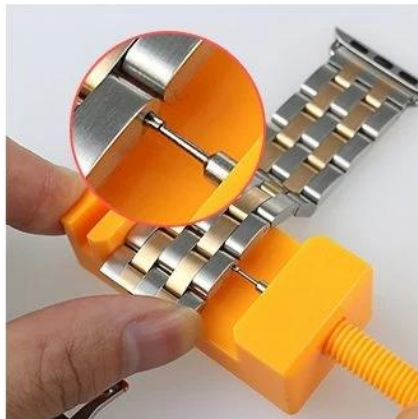

6. Use the link remover to push the elastic rod in so the link will go into another. Slightly adjust the link position until they locked firmly.

