Apple Watch Ultra Series 8 7 6 5 4 3□□□ □□ □□□ □□□ □□ □□□

□□ □□□ **:**
● □□ □□ □ Apple Watch Ultra Series 8 7 6 5 4 3 □.
● □□ : CBIW1011
● □□ : □□□
● □□ : □□□, □□ □, □□□, □□□, □□□, □□ □□□ □
● □□□ □□□ : 140-200mm
● □□ : □□□ □□□ □□ □□□
● □□□ □□□□□ □□□□□□ □□□ □□ □□□ □□□ □□ □□□ □□ □□□□□.

□□ □□ □□□ □□□□□
□□ □□ □□ □ □□ □□□ □□□□□
□□ □□□ □□□ □□□□□□

□□ □□ : □□ OPP □.
□□ □□ □□□□ □□□ □ □□□□. □□□□ □□□□□□.
□□ □□□ □□□ □□ □□□ [□□, □□, □□, □□, □□ □]

#1

蓝色

#2

黑色

#3

黑灰

#4

彩色

#5

红色

#6

深紫

#7

浅蓝

#8

浅灰

#9

黑白

#10

杏色

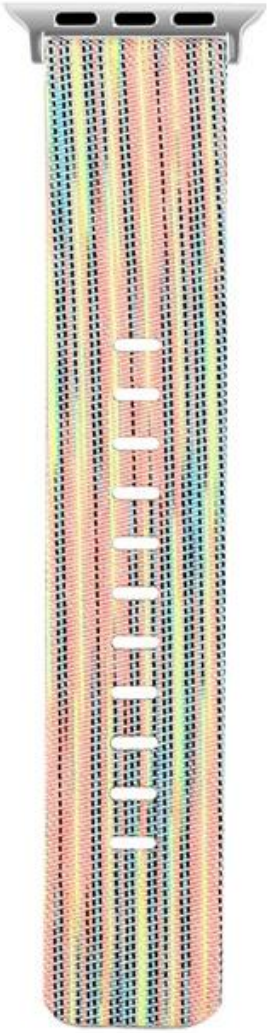

T-shaped Streamline Design

Stainless Steel Buckle

12
HERMÈS
PARIS
9
3
27
6

Backspace
Enter

Tape size diagran

Fits most wrists 5.5-7.9inch/140-200 mm

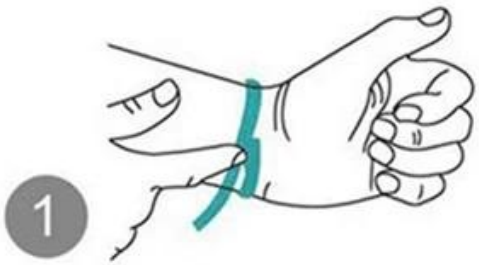

Wrap the rope to your wrist tight and then make a mark on it.

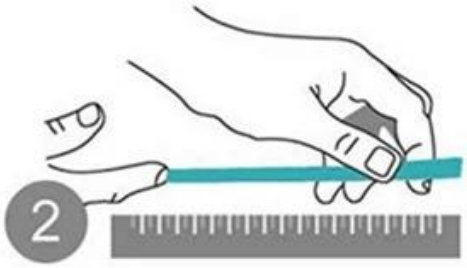

Measure the rope length from zero scale to the marked position with a ruler.

FITS UP TO

5.5-7.9inch(14-20cm)wrist

⋆ Pure manual measurement, if there is any error, please forgive me.

How to Install

The following figure

1

Press the raised button.

2

Slide the tape onto the track of the watch and slide in the direction of the arrow (Note: Slide without loosening the button)

3

When you hear the click, it means that the strap has been buckled with the dial, so you can use it safely.